



Due to switch of IP telephony to new soft-switch SI-3000,
new Star Codes implemented

- Unconditional Call Forward

Assignment

*21*Tel numb#, where

Tel numb – number where call should be forwarded

Cancel

#21#

- Call Forward on Busy

Assignment

*22*Tel numb#

Cancel

#22#

- Call Forward on No Answer

Assignment

*61*Tel numb#

Cancel

#61#

- Abbreviated Dialing

Assignment

*51*AB*xx#, where

AB – short code from 00 to 99,

xx – telephone number that you wish to dial with short code,

Cancel

#51*AB#

Check

Pick Up, dial **AB (short number)

- Password Dialing

Assignment

*34*xxxxB#, where

xxxx – 4 password digits (default 1111),

B – call destination type to protect dialing (1,2,3), where

1 – all destination protected (exception – emergency numbers)

2 – Intercity and International

3 – International

Cancel

#34*xxxxB#

- Password Change (to dial destination)

*30*xxxx*yyyy#, where

xxxx – old password (default 1111)

yyyy – new password (user choice)

- Call Waiting

Assignment

*43#

Cancel

#43#

During talk of A with B, when A is dialed by C, – while talking the user A hears short beeps in phone (like on mobile phone at “second connection”). On pressing “flash”(star) and

0 – user C gets signal “Busy”, A and B talk continues;

1 – connection switches to users A and C, user B – on hold;

2 – return to user B.

IMPORTANT!

Services should be assigned / canceled only via tone dial.
If impulse dial is on – assignment / cancel do no work!